

Philips
Brush retainer

CRP768



Keeps the rollerbrush in place.

Find matching products on the specifications tab

The rollerbrush retainer keeps the rollerbrush in place in your HomeRun, without this bracket the rollerbrush will not stay fixed in the HomeRun. When this part gets damaged or broken, you can easily replace it.

Specifications

Replaceable part

- Fits product type :: FC9910/01/A, FC9910/01/B

Suitable for

- HomeRun: FC9910/01/A, FC9910/01/B



Issue date 2012-11-27

Version: 1.0.1

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com